Installation instruction

ARAT Special mount for Navigation Systems

Artikel-Nr.: NS 1353
for BMW 1 series E87
2004 .....

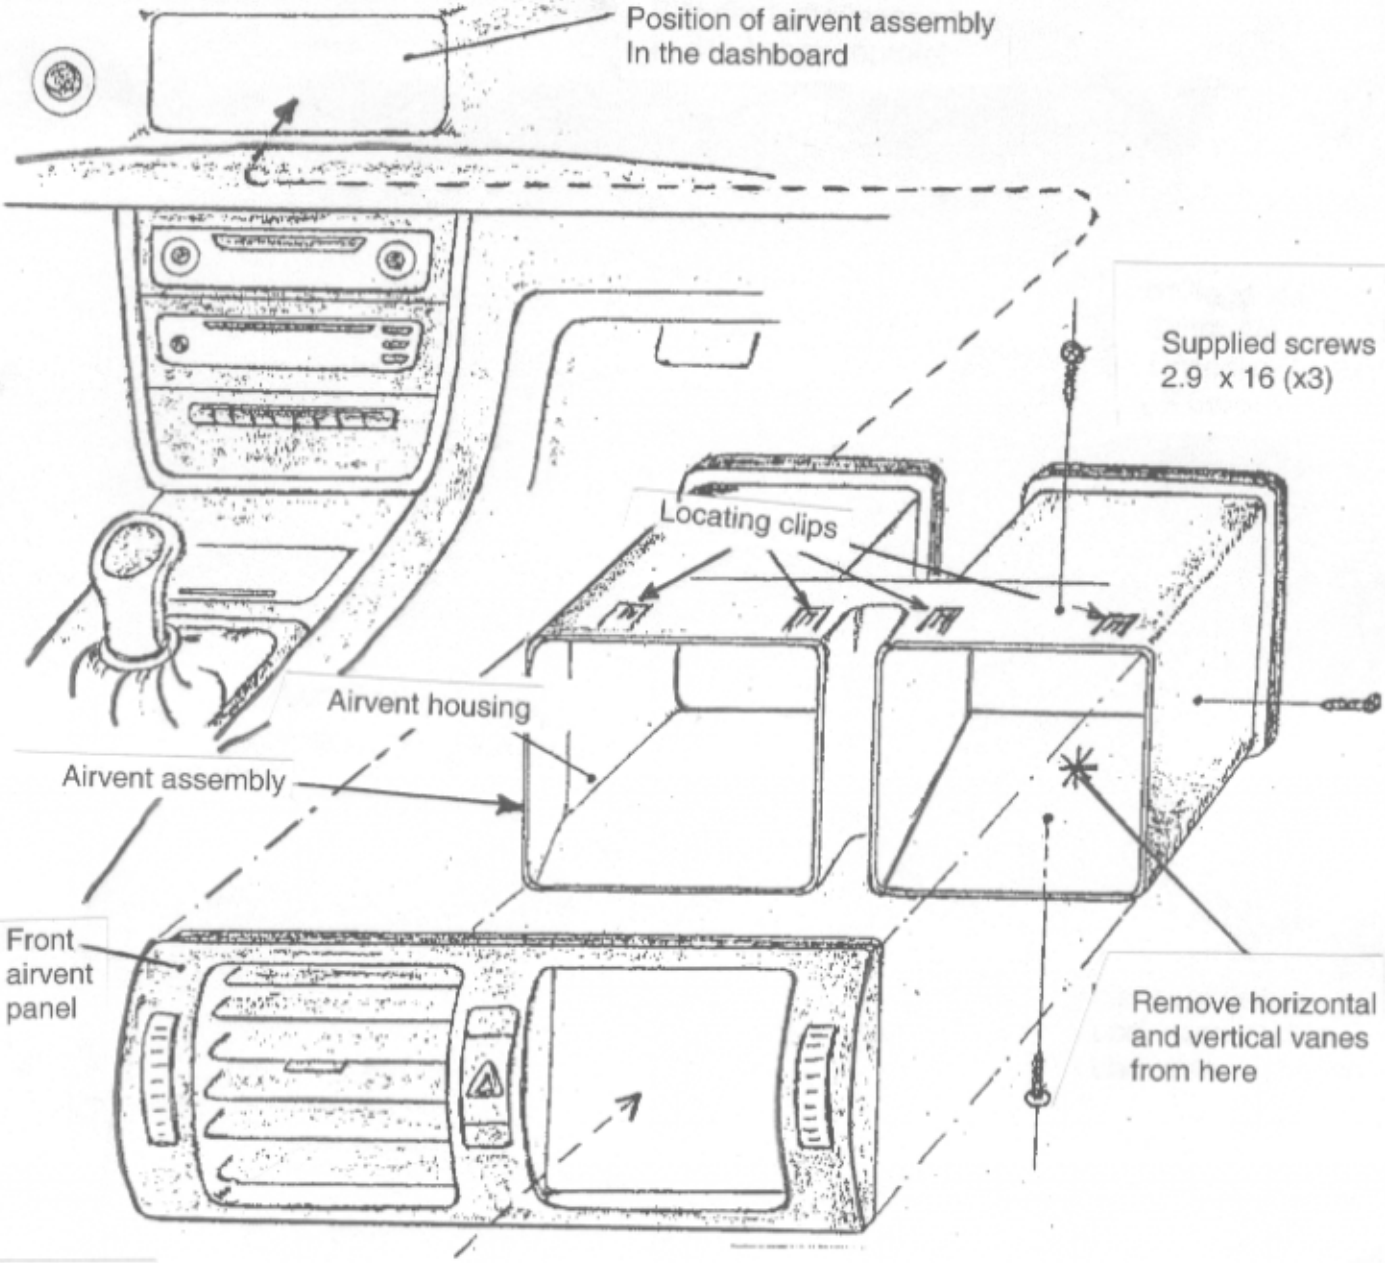

Installation instruction

1. Remove the airvent assembly from its housing, (press down the locating clips on the top of the airvent assembly)
2. Remove the front airvent panel from the assembly, and remove the horizontal and vertical vanes from the right hand front airvent panel
3. Replace the front airvent panel into the airvent assembly, and place the NS mount in the opening where the airvanes were. Secure the mount using the supplied screws through the side wall of the airvent assembly into the NS mount. Replace the airvent assembly complete with NS mount Into the dashboard

Cable channel:
Lay the cable to the display through the airvent assembly via the pre-formed channel in the NS mount